


OPENING AND LOCKING:

To open or lock the columns, aim your remote control at the receiver eye and press the button. The led lights on the columns will then light up and the columns will produce a short sound signal.

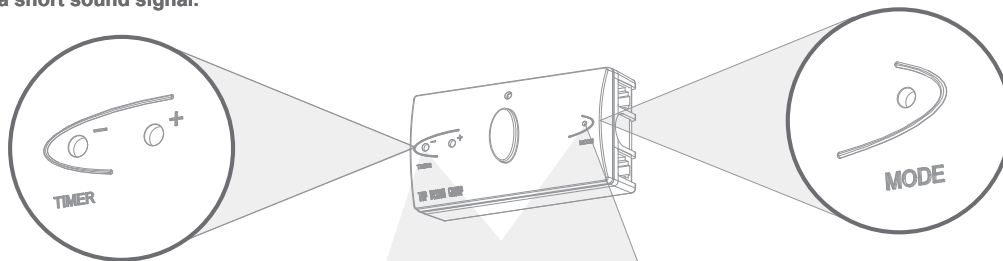

TIMER BUTTON

Timer function, locking automatically:

Upon delivery, the timer function is on and set at an interval of 120 seconds (2 minutes). When the frame security is unlocked the timer automatically locks it again after the interval. The timer interval can be changed using the "+" and the "-" buttons on the receiver unit (in stages of 30 seconds). The maximum interval is 300 seconds (5 minutes). The minimum (0 seconds) switches the timer off. When pressing the "+" or the "-" buttons a high (+) or low (-) sound signal is produced. The maximum and minimum can be instantly reached by pressing the "+" button or "-" button for a longer period.

Comfort timer function:

Just before the automatic closure, the green led on the receiver will blink and a tripple sound signal will be heard. If desired to continue your sales pitch and keep the column(s) opened, one push of the button of the remote control will extend the timer interval by 5 minutes. A second push of the button of the remote control during this 5-minute extension will lock the column(s) again. The sales progress will not be interfered but security of the frames remains guaranteed. During the timer interval it will always be possible to lock the frame security using the remote control.

MODE BUTTON and TIMER BUTTON

Reset instructions:

Press the "mode" and the "-" button simultaneously for a 5 seconds, to erase all programmed remote controls. This is confirmed by 3 sound signals. The led will stay on during erasure, followed by a long sound signal to confirm that all the receiver has been reset.

Removing a code:

If you wish to remove all remote control codes, or have a malfunction and desire a reset, follow these instructions. Press the "mode" and the "-" button simultaneously for a 5 seconds, to erase all programmed remote controls. This is confirmed by 3 sound signals. The led will stay on during erasure, followed by a long sound signal to confirm that all remote control codes have been erased. You can add new codes by following the Adding a code instructions.

MODE BUTTON

Adding or removing remote controls codes:

Each production order is given a unique remote control code to prevent misuse of the security system by third parties. Upon delivery, the code is pre-programmed in the remote control and the receiving electronics. If desired, it is possible to add extra codes in a later stage. It is also possible to erase programmed codes, for example in case of loss or theft of one of the remote controls.

 
Adding a code:

To add codes, press the embedded "mode" button on the receiver for 3 seconds. This will be confirmed by a long sound signal and the green led will light up. Then, aim the new remote controls at the receiver eye, one at a time and press the button on the remote control. The remote control is accepted if you hear a short sound signal. A double signal will be heard if it was an existing remote control.

Leave the programming mode by pressing the "mode" button shortly. This is confirmed by three short sound signals and the led turning off. When no programming action is executed for more then 60 seconds, the programming mode is closed automatically.

Switch sound on/off:

To turn the sound signals on or off, press "mode" button for 3 seconds. This will be confirmed by a long sound signal and the green led will light up. Then, presse the "-" button to switch the sound off. This is confirmed by 3 light signals. Press the "+" button to switch the sound back on. This is confirmed by 3 sound signals. Leave the programming mode as mentioned above.



Creating groups of columns:

If you would prefer the columns to open in pre selected groups you can do so by programming each column to belong to group 1, 2 or 3.

To program a receiver into a specific group, press the embedded "mode" button on the receiver for 3 seconds. This will be confirmed by a long sound signal and the green led will light up. Then, aim the remote control at the receiver eye, and press the desired group number on the remote control. All columns that are connected to that specific receiver are now in this desired group. The receiver accepted the group if you hear a short sound signal. A double signal will be heard if it was an existing remote control.

Leave the programming mode by pressing the "mode" button shortly. This is confirmed by three short sound signals and the led turning off. When no programming action is executed for more then 60 seconds, the programming mode is closed automatically.



- ▲ Open all columns
- ▼ Close all columns
- ① Open all columns in group 1
- ② Open all columns in group 2
- ③ Open all columns in group 3

Deleting groups:

If you wish to remove a group, you will have to remove all codes. You can do so by following these instructions. Press the "mode" and the "-" button simultaneously for a 5 seconds, to erase all programmed remote controls. This is confirmed by 3 sound signals. The led will stay on during erasure, followed by a long sound signal to confirm that all codes have been erased. You can add new codes with the adding code or creating groups procedure.

Factory settings:	
Timer:	120 seconds
Sound:	On
Group:	No groups pre programmed